

DIY: "FARMHOUSE" ENTRY BENCH

PAINT GRADE QUOTE #3040011

STAIN GRADE QUOTE #3040012



(Source: www.ana-white.com)

Please inquire with our Service Desk at Nova Scotia Building Supplies for current pricing on material.

Project Type: Bench / Coffee Table

Room: Entry / Dining Room

Skill Level: Beginner

Style: Farmhouse / Modern


SHOPPING LIST:

1 - 2x6 @ 8 feet or stud length
2 - 2x4 @ 8 feet long
1 - 2x2 @ 8 feet long
1 - 2x12 @ 4 feet long (OR use a 2x6 for the seat - grab an extra 2x6 @ 8 feet long
Wood Glue
Wood Filler
120 Grit Sandpaper
Primer
Wood Conditioner
Paint
Paint Brush

TOOLS:

Measuring Tape
Square
Safety Glasses
Hearing Protection
Kreg Jig
Drill
Circular Saw
random orbital sander

DIMENSIONS:

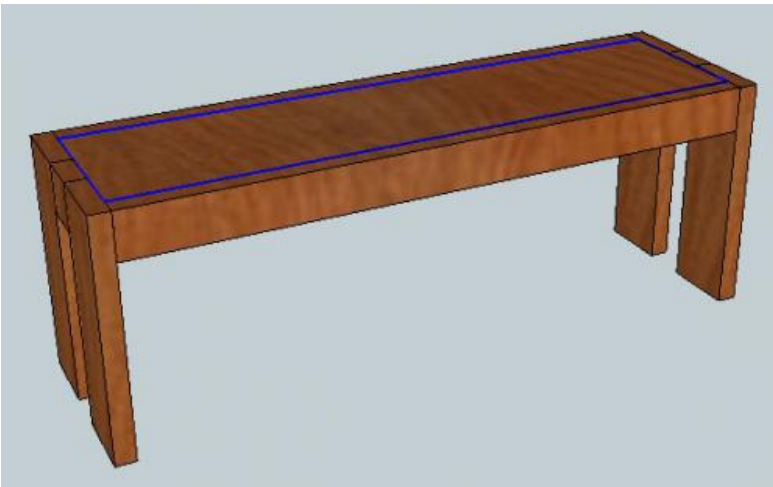

48" long x 18" high x 13" wide

CUT LIST:

4 - 2x6 @ 18"
2 - 2x2 @ 11 1/2"
2 - 2x4 @ 47 1/2"
2 - 2x4 @ 3 1/2"
1 - 2x12 @ 47 1/2"


CUTTING INSTRUCTIONS:

It is recommended that you measure the width of your seat board (the 1x12) before constructing, and ensure that it is 11 1/2" wide.

You can also substitute 2 - 2x6s for the seat (cheaper and better matched to the table) but you will need to adjust accordingly.

You will also need to add additional 2x2 supports or use a Kreg Jig to join the seat boards.


You can also make your seat wider if desired.

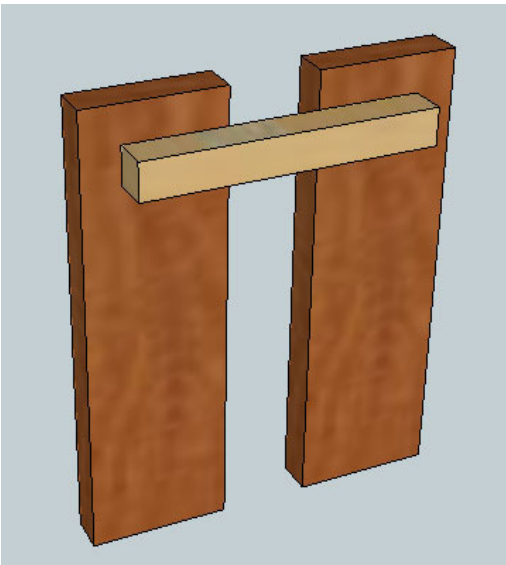

Step 1:

Start with 2 of the legs. Measure down and in from the outside corners 1 1/2".

Screw the 2x2 in place, as shown above.

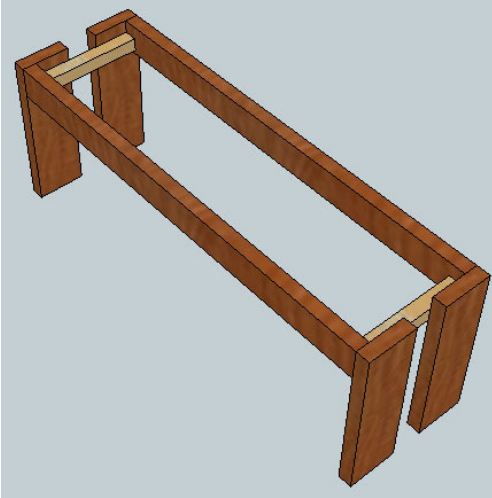


Step 2 :

Add the side apron pieces, the long 2x4s as shown above. Keep the top edge of the 2x4 flush with the top of the legs. Predrill and countersink into the 2x2. Also, screw from the outside of the leg pieces into the end edge of the side apron.



Step 3:

Add the end apron pieces, predrilling and securing to the 2x2. Keep the top edge flush with the leg pieces.

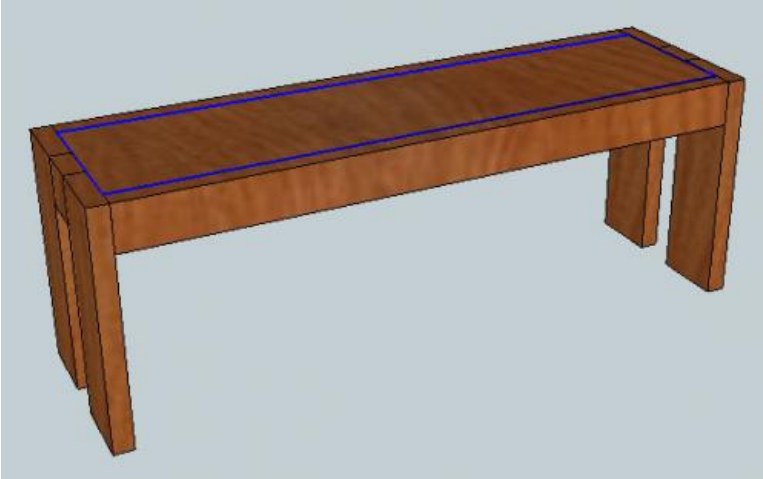

Step 4:

Add the seat, the 2x12, as shown above.

Predrill and screw through the sides of the apron into the outer edges of the seat.

Preparation Instructions:

Fill holes with wood filler and sand well. Finish as desired.

This plan and project source is www.ana-white.com

**If you are interested in building this project please refer to quote:
#3040011 for Paint Grade or #3040012 for Stain Grade**

Simply print these instructions, and our staff would be more than happy to provide you with the materials and pricing for your project.